

AIRPORT DIAGRAM

BIRMINGHAM-SHUTTLESWORTH INTL (BHM)
AL-50 (FAA)
BIRMINGHAM, ALABAMA

ATIS
119.4 270.1
BIRMINGHAM TOWER
119.9 317.725
GND CON
121.7 348.6
CLNC DEL
125.675 305.2


D

33°35'N
33°34'N
33°33'N
MAG. VAR. 3.6° W
JANUARY 2020
ANNUAL RATE OF CHANGE
0.1° W

RWY 06-24
PCN 65 F/C/X/T
S-175, D-205, 2D-350
RWY 18-36
PCN 45 F/C/X/T
S-75, D-170, 2D-240

RESTRICTED ACCESS
(prior approval only)

FIELD
ELEV
650

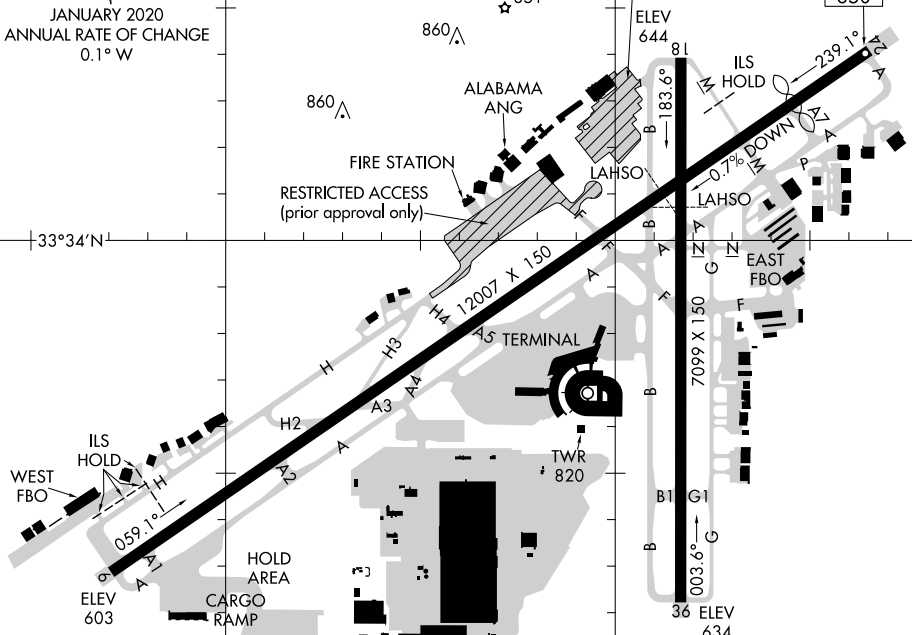

CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.

SE-4, 28 JAN 2021 to 25 FEB 2021

SE-4, 28 JAN 2021 to 25 FEB 2021

AIRPORT DIAGRAM

BIRMINGHAM, ALABAMA
BIRMINGHAM-SHUTTLESWORTH INTL (BHM)