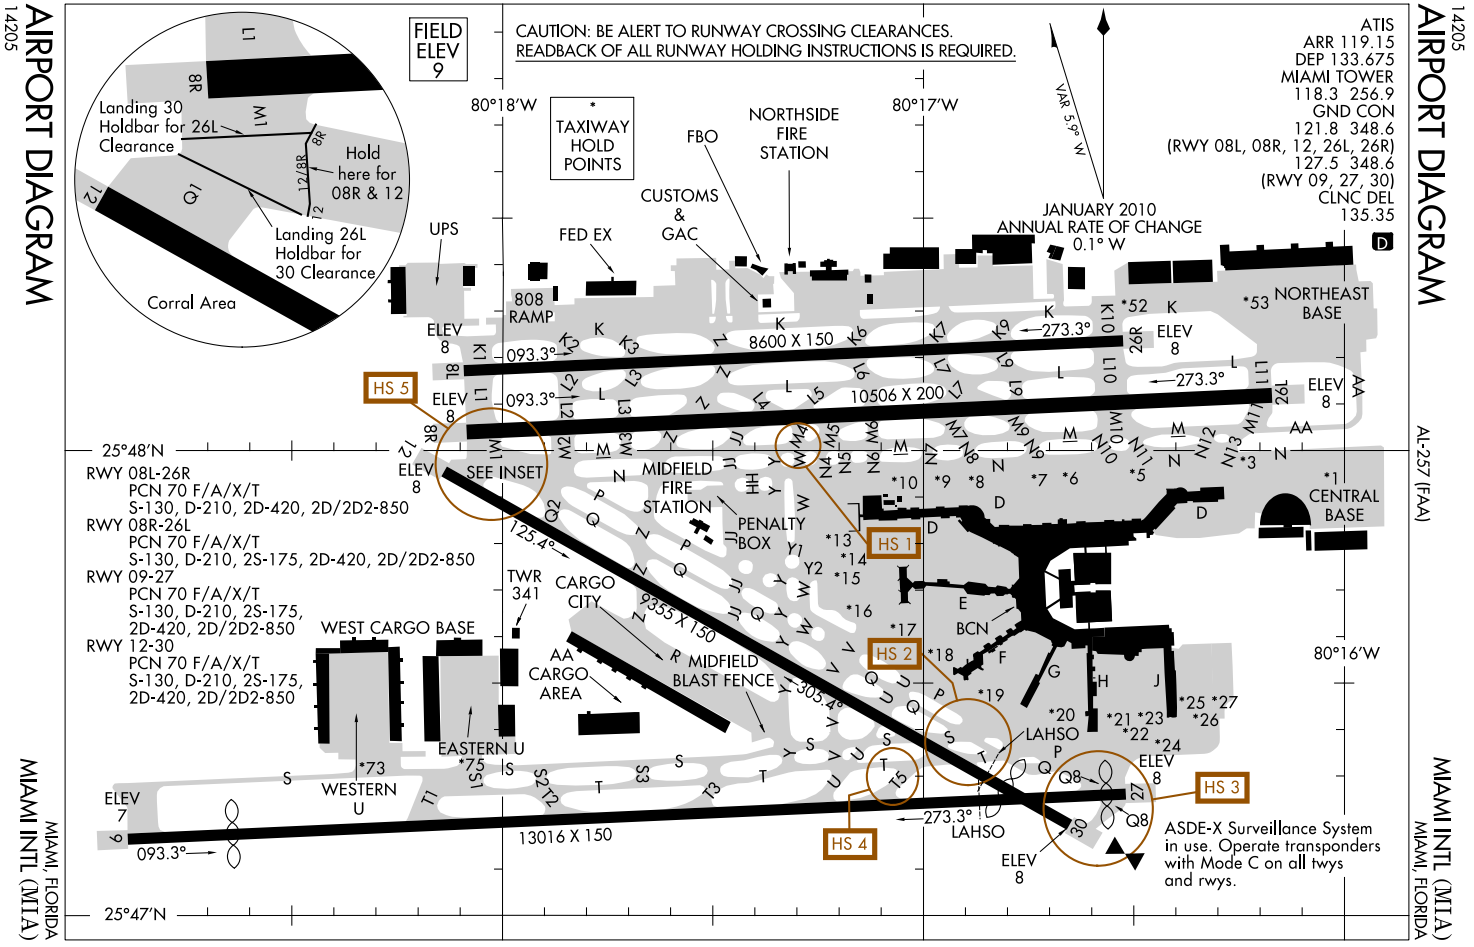
AIRPORT DIAGRAM
14205
MIAMI INTL (MIA)
MIAMI, FLORIDA
FIELD ELEV 9
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
TAXIWAY HOLD POINTS
ATIS
ARR 119.15
DEP 133.675
MIAMI TOWER
118.3 256.9
GND CON
121.8 348.6
(RWY 08L, 08R, 12, 26L, 26R)
127.5 348.6
(RWY 09, 27, 30)
CLNC DEL
135.35
VAR 5.9° W
JANUARY 2010
ANNUAL RATE OF CHANGE
0.1° W
80°18'W
80°17'W
80°16'W
25°48'N
25°47'N
Landing 30
Holdbar for 26L
Clearance
Hold
here for
08R & 12
Landing 26L
Holdbar for
30 Clearance
Corral Area
UPS
FED EX
CUSTOMS
&
GAC
FBO
NORTHSIDE
FIRE
STATION
808
RAMP
8600 X 150
10506 X 200
9355 X 150
13016 X 150
HS 1
HS 2
HS 3
HS 4
HS 5
SEE INSET
NORTHEAST
BASE
CENTRAL
BASE
MIDFIELD
FIRE
STATION
PENALTY
BOX
TWR
341
CARGO
CITY
AA
CARGO
AREA
WEST CARGO BASE
EASTERN U
WESTERN
U
MIDFIELD
BLAST FENCE
LAHSO
BCN
RWY 08L-26R
PCN 70 F/A/X/T
S-130, D-210, 2D-420, 2D/2D2-850
RWY 08R-26L
PCN 70 F/A/X/T
S-130, D-210, 2S-175, 2D-420, 2D/2D2-850
RWY 09-27
PCN 70 F/A/X/T
S-130, D-210, 2S-175,
2D-420, 2D/2D2-850
RWY 12-30
PCN 70 F/A/X/T
S-130, D-210, 2S-175,
2D-420, 2D/2D2-850
ASDE-X Surveillance System
in use. Operate transponders
with Mode C on all twys
and rwys.
AL-257 (FAA)